


Installation Instruction

LED Circular HighBay

Applicable models:
SSL-CHB2

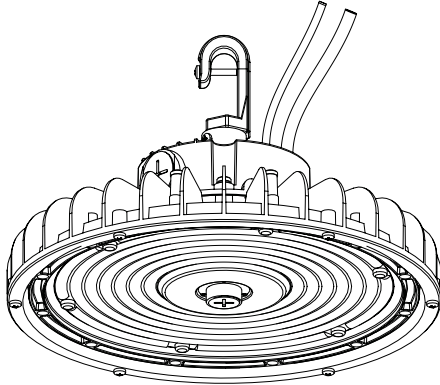

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product. Failure to do so could lead to electric shock, fire or other injuries that could be hazardous or even fatal.

- Be sure the electricity to the wires you are working on is shut off. Either remove the fuse or turn off the circuit breaker.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This product must be installed in accordance with local, state and national electrical codes.
- Installation work shall be completed by a licensed installer that is familiar with the construction and operations of the product.

CAUTION:

- This product can only be dimmed with standard 0-10v low voltage dimming systems.

NOTICE


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

- This Class B digital apparatus complies with Canadian ICES-003.

PACKAGE CONTENTS

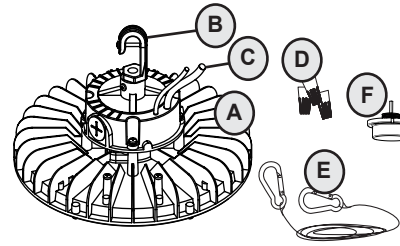

INSTALLATION INSTRUCTIONS

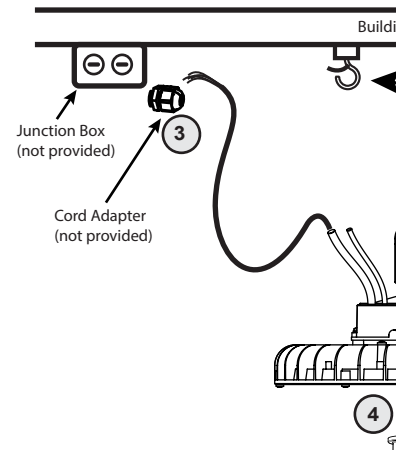

1a Hook/Chain mount: Use the hook to drop-mount the fixture.

1b Pendant Mount: Twist out the pre-install pendant tubing directly or use access to wiring compartment, so source.


1b* NOTE: Pendant mount method still external to the pendant tube, pendant wiring compartment.

2 Attach one end of the safety cable around a structural member of the mounted fixture.

3 Route the input cord into building junction box (not provided). Connect input wires.

4 The optional motion sensor is a twist-out motion sensor (Two optional motion sensors are available).


INSTALLATION U-BRACKET INSTRUCTIONS

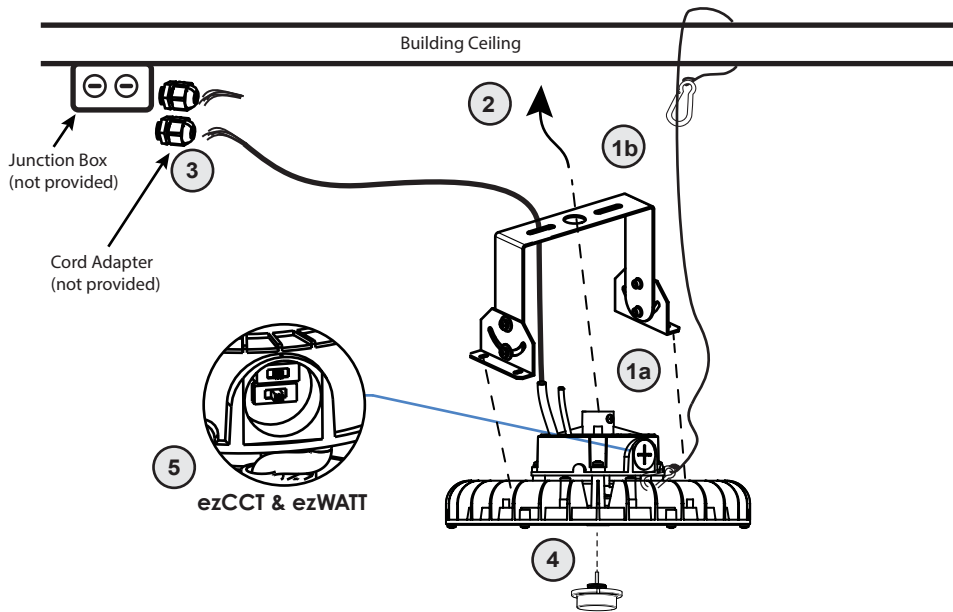

- 1a U-Bracket:** Connect fixture heads to the swivel U-Bracket, Screw Bracket to fixture secure hook and pass chain through U-Bracket. Route input cable through U-bracket.
- 1b Hook connector:** Use the hook to connect directly to the bracket for surface mounting for added security attach the safety cable to fixture
- 2** Once the hook is connected to linkable bracket lift off ground and mount onto preferred surface with screws provided by manufacture for use such as wall and ceiling mounting options.
- 3** Route the input cord into building junction box using appropriate adapters as required (not provided). Connect input wires as indicated in the following wiring diagram.
- 4** The optional motion sensor is a twist and lock sensor that is quick and easy to secure. (Two optional motion sensors are available for this product the same is both.)
- 5** Please turn off the power supply before adjusting the power and color temperature, otherwise it will cause damage to the fixture.
Unscrew the plug for adjustment and then screw it back

WIRING DIAGRAM

Input connections

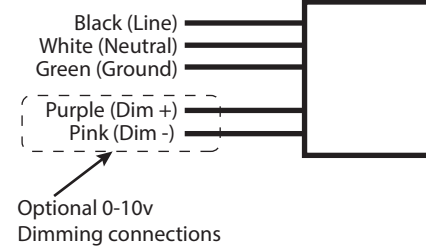

CARE AND MAINTENANCE

Clean with a mild, non-abrasive glass cleaners containing abrasive agents. When cleaning, turn the power off, and any liquid spray should be applied to the fixture itself.

TROUBLESHOOTING

Problem	Possible Solution
Fixture does not light.	1. Power is off. 2. Incorrect wiring. 3. Defective wall switch.
Circuit breaker trips when light is turned on.	Crossed wires or wire is grounded.

WARRANTY

This fixture is warranted to perform free of charge for the life of the fixture.